



FGS
METALWORK

FGS
STRUCTURAL

THE
FENCE & GATE
SPECIALIST

MANUAL RELEASE PROCEDURE

TOUSEK TPS 20

In case of a power failure or other defect the drive pinion can be disengaged from the gearmotor as follows:

- **Switch off power supply !**



- Turn the lock cover (A) in counter-clockwise direction, until the emergency release key can be inserted. Now turn the key (S) to the left and up to the stop (anti-clockwise), until you hear a click and it reaches the unlocked position.
- Now the gate can be opened and closed by hand.

Re-engaging the emergency release mechanism:

To return to normal motor operation please turn back the key to its original position.



Important

- **After the key has been turned back, slowly move the gate manually in its travel direction until you can hear that the gearing has re-engaged!**

Remove the key afterwards.

With next command the motor searches the open position (a new learning of end positions is not necessary).

