



FGS
METALWORK

FGS
STRUCTURAL

THE
FENCEGATE
GROUP

MANUAL RELEASE PROCEDURE

TOUSEK TURN 310

3. Note for the user - Emergency release (e.g. at power failure)

TURN 310 UF

In case of a defect or power failure the operator can be emergency released as follows:

- Turn off power supply!



- Open plastic cap at the emergency release mechanism (7a).
- Insert emergency release lever (7b) as shown in the drawing and turn it right till the gate bearing (7) is released of the gate driver (4). Keep this position and release the gate manually.
- To restore motor operation turn the gate until you can hear that it has re-engaged.
- Put on the plastic cap again.



Note

- Installation, connection, taking into operation and maintenance may only be carried out by qualified professionals and with regard to this manual.

