



FGS  
METALWORK

FGS  
STRUCTURAL

THE  
FENCE&GATE  
SHOP

# MANUAL RELEASE PROCEDURE

## - TOUSEK X3 and X4

- should it be necessary to release the operator (e.g. in case of power failure, please proceed as follows:

- **Turn off power supply of gate facility!**



- Unlock the emergency release lock and turn the emergency release lever to the limit (for 90°).
- The operator is now unlocked and the gate may be moved manually (**slowly** !- not faster than with the operator).
- For operator usage turn the emergency lever back to its initial position and close the emergency release lock.
- After that turn on the power supply.  
After impulse transmission the limit positions (OPEN and CLOSE) are being automatically adjusted.

